

The Garber Company
1-800-613-4860
www.garberseeder.com

Check for wear on lift nut periodically.
Safety nut will eliminate deck from
falling if lift nut should become worn.

When replacing lift nut allow 1/8"
clearance between safety nut and lift nut.

Check travel - Safety nut should not hit
top of pipe.

It may be necessary to readjust bottom
collar on limit switch rod so safety nut
does not hit top of screw containment
pipe at bottom.

