

The Garber Company  
1-800-613-4860  
www.garberseeder.com

Check for wear on lift nut periodically.  
Safety nut will eliminate deck from  
falling if lift nut should become worn.

When replacing lift nut allow 1/8"  
clearance between safety nut and lift nut.

Check travel - Safety nut should not hit  
top of pipe.

It may be necessary to readjust bottom  
collar on limit switch rod so safety nut  
does not hit top of screw containment  
pipe at bottom.

